
## ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0343

## WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.



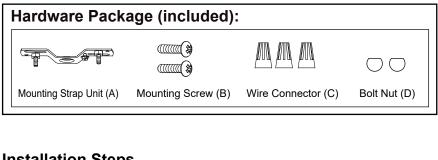

## Installation Steps

## Turn off the power at fuse or circuit box.

1. Attach mounting strap unit (A) to outlet box using two mounting screws (B).


- 2. Rod Connections:
  - a. Thread the fixture wire from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
  - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
  - c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 27-1/2" to 75". Use fewer rods if shorter length is desired.

- 3. Thread the fixture wire through coupling kit, canopy, then secure the rod assembly to the coupling kit.
- 4. Screw 12 long rods to the other threaded pipes of fixture.
- 5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
  - ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
  - ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
  - ---Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.

- 6. Attach the canopy to the mounting strap unit (A), then secure it with two bolt nuts (D).
- 7. Install bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed .

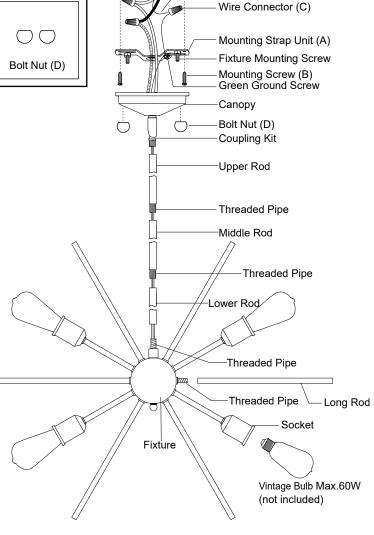


**Outlet Box** 

House Grounding Wire



8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

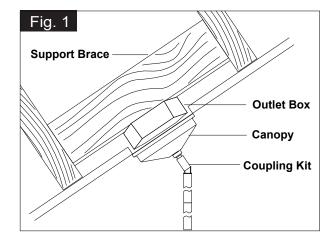

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

