

INSTRUCTION SHEET

311B03

NOTE: Please consult a qualified electrician if you are not certain of installation or servicing.

CAUTION:


- Before starting installation or servicing, disconnect power by turning off the circuit breaker or by removing the fuse at the fuse box.
- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly of this lighting fixture.
- **SAVE THESE INSTRUCTIONS**

To Assembly:

1. Carefully unpack the fixture, spread out fixture, and lay out all parts on a clean surface.
2. Attach mounting plate (B) to Junction Box using two mounting screws (C).
3. After installation, Make sure lock-up screws (C) are vertically align. A level can be used to check.
4. To mount fixture, slip the two lock-up screws (E) through the canopy.
5. While holding canopy in place, thread the two ball nuts (F) onto the end of the lock-up screws (E), and tighten.
6. Install 4-60W.max, **TYPE b** bulbs, or 13W self-ballasted lamp (Bulbs not included).
7. Install the spikes with Crystals (Refer to separate pages I.S.)
8. Turn on power.


Enclosed Parts:


- | | | |
|----------------------|-------------------|-------------------|
| A. Wire Nuts | B. Mounting Plate | C. Mounting Screw |
| D. Ground screw | E. Lock-up Screw | F. Ball nuts |
| G. Spikes w/ Crystal | H. Bulb | |

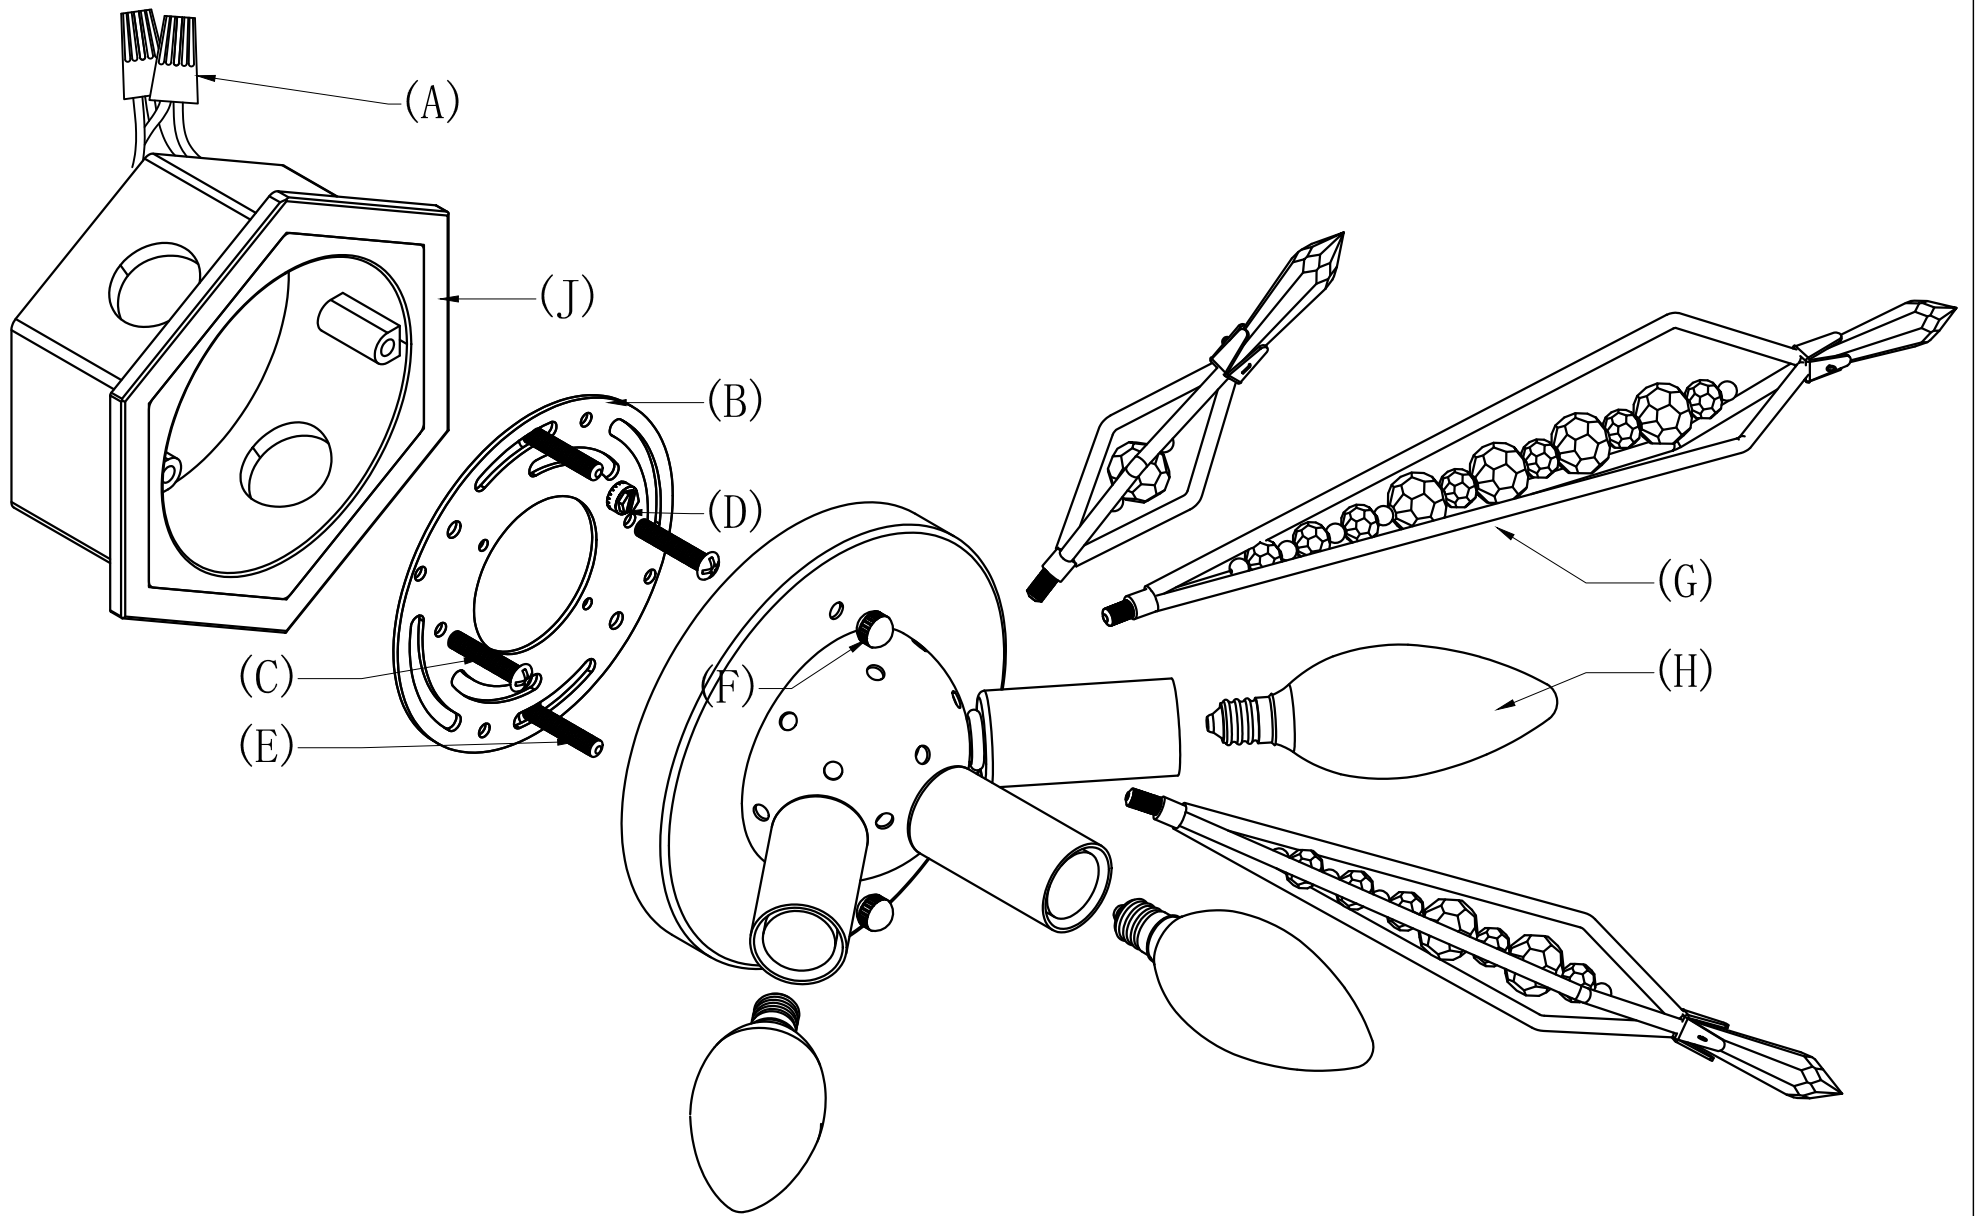

CRYSTAL SPIKE ASSEMBLY SHEET
311B03 Orbital 3 Lights Bath

Layer 1

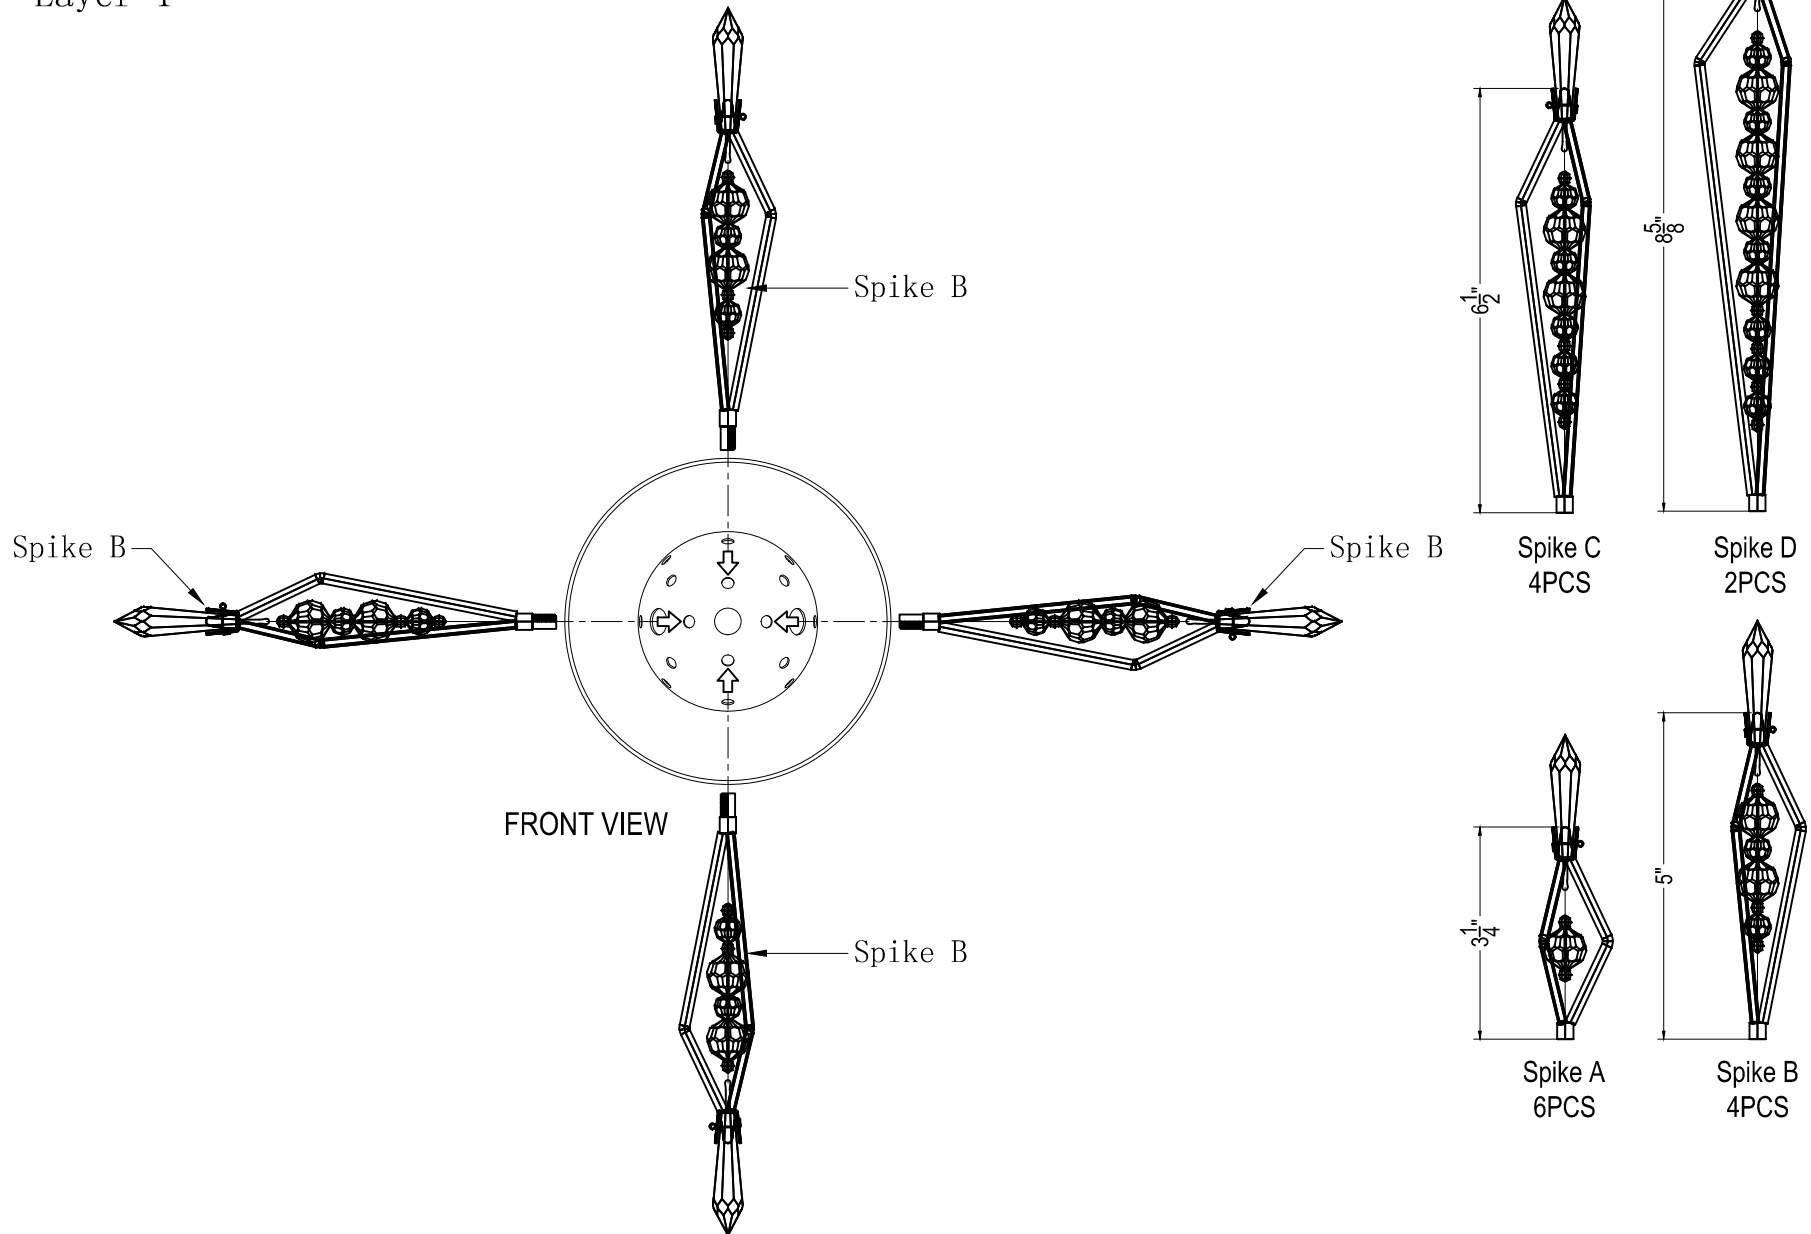

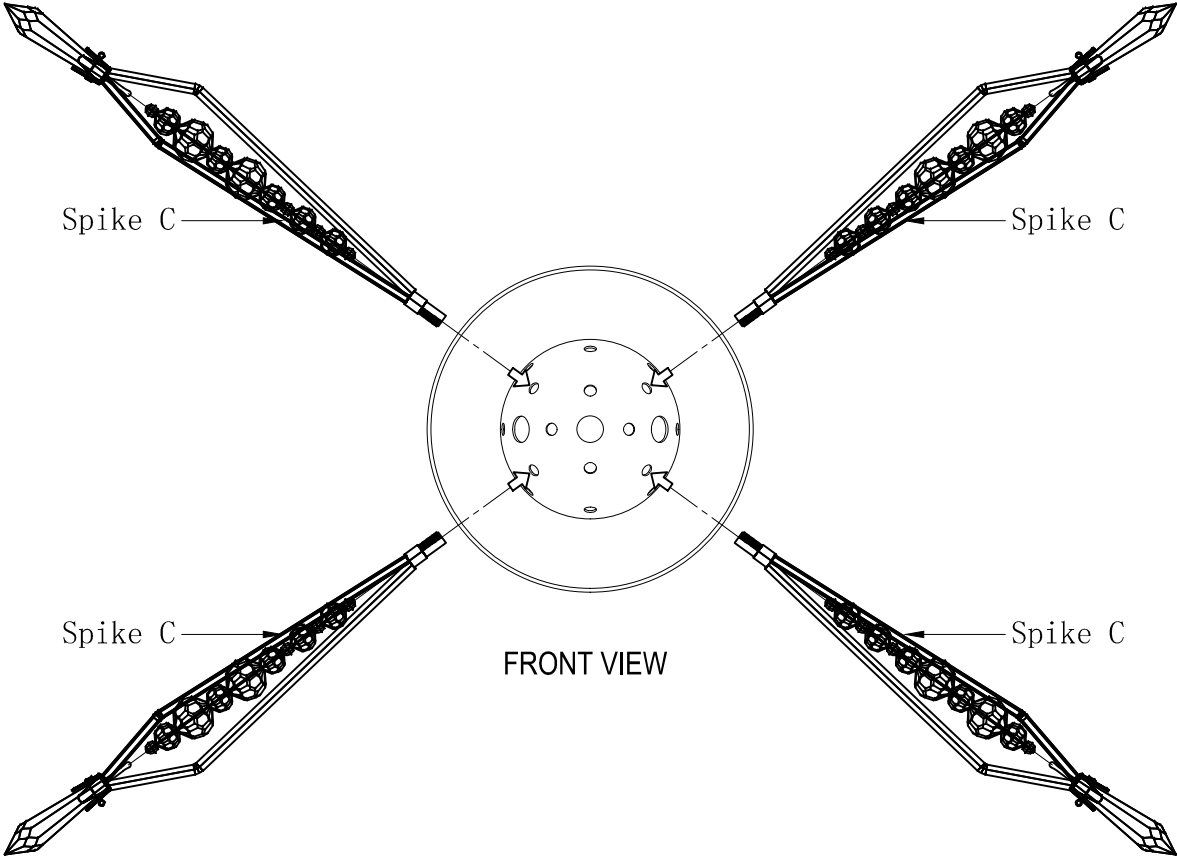

Layer 3

